Red/Blue Emergency Flashing Lamp

Patterns IP67

14 Flash

Protection

3 Year Warranty

• 14 Flash Patterns

• 3M Tape/Screw Fitting

• Synchronising Wire

High Powered 3 Watt LEDs

• SAE J595 Class 1

IP67 Rated

• 3 Year Warranty

Function Emergency Lamp

Size 131mm x 30mm x 8mm

Voltage Multivolt 12-24V


LED Qty 6 x 3 Watt

Cable 25cm

Draw	Constant	Strobe
@13.8V	0.29A	0.72-0.005
@28V	0.153A	0.36-0.008
Approvals	ECE R10 Compliant	

SAE J595 Class 1

Flash Patterns 6-7 only*

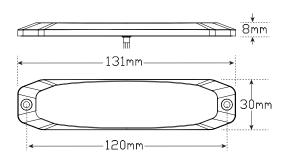



Part No. 120035RBM



Clear Lens when Inactive

Flash Selection

- 1. Connect Red wire to power and Black wire to earth to power the lamp.
- 2. Tap Brown wire to power to cycle through the 11 flash patterns.
- 3. Hold Brown wire to power for 7 seconds to reset to the start (Constant Flash Pattern #1).

Simultaneous or Alternating Flash (when using multiple units)

- 1. To enter grouping mode, connect all Red and Brown wires together, then connect to power. Each lamp will flash to identify which group they belong to.
- Single Flash = Group 1, Double Flash = Group 2.
- 2. While maintaining power to Red wires, remove the Brown wires from power.
- 3. To change groups, tap Brown wire to power. Lamps that are set to the same group will flash simultaneously. Lamps that are in opposite groups will alternate flash.
- 4. Once lamps are in desired group, disconnect Red wires from power then reconnect to power to exit grouping mode.
- 5. Connect all brown wires together to synchronise lamps. (Hold all brown wires to power for 7 seconds to reset all flash patterns to start)

NOTE: Maximum of 20 lamps can be Syncronized together.

-1-					
Flash Pattern Selection*					
1	Constant On	8	Single all		
2	Single (2Hz)	9	Double all		
3	Double (2Hz)	10	Quad all		
4	Quad (2Hz)	11	Quint all		
5	Random	12	Ultra all		
6	Double (Split) (SAE)	13	Single-Quad all		
7	Quad (Split) (SAE)	14	Constant/Double		

