# LB Series 862mm Emergency Bar


- Heavy Duty Emergency Bar
- High Brightness 64 Watt Output
- 10 Selectable Flash Patterns
- IP67 Ingress Protection
- Voltage Range 10-30 Volt
- 2 Year Warranty


Function	Amber Emergency Bar
Size	862mm x 206mm x 85mm
Voltage	Multivolt 10-30V
LED Qty	128 x 0.5 Watt
LED Lifespan	30,000 Hours
Beam Angle	360° Omnidirectional
Cable	50cm
Temp Range	-40°C to +60°C

#### Draw

@12V	4A
@24V	2.2A
Lens	Polycarbonate
Base	Polycarbonate
Fittinas	Painted Steel

No	Flash Pattern	No
1	Rotate	6
2	Single (Class 1, LB621/862/1103/1345)	7
3	Quad (LB252ACM Class1 Only)	8
4	Quint Split	9
5	Single/Triple/Quint	10

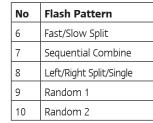

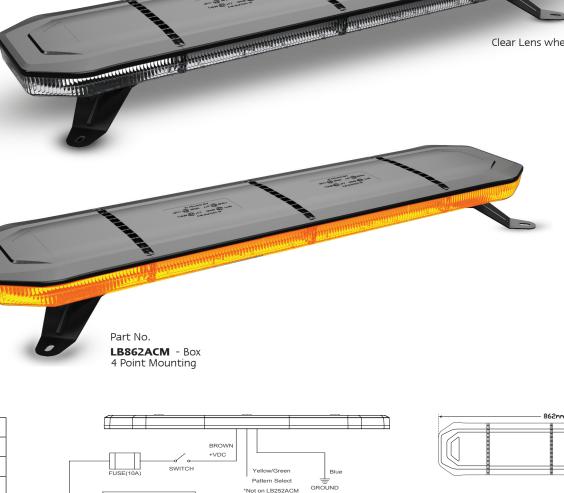

an Constant and Constant

Contraction of the Contraction o

50mm Adjustable Mounting Feet Width



#### All enquiries P: (03) 9466 7075 E: led@ledtech.com.au, www.ledautolamps.com

Clear Lens when Inactive

ECE R10 Approved

**J845** Class 1

IP67 Protection

**2 Year** Warranty

All efforts are made to ensure all information is correct and up to date, it can be subject to change without notice. All measurements are in millimeters (mm) and are not to scale. ® All LED Technologies designs are registered throughout the world. - Current as of 24/03/2020

GROUND

Next Pattern, Touch Brown +VDC to the Green wire for 0.5 sec. Return to Default Pattern #1, Touch Brown +VDC to the Green wire for 2.5 sec.



# LED EMERGENCY BAR

R10 APPROVED - SAE/J845 Class 1 Compliant

# **Operating Instructions**


Part No.	LB252ACM	LB621ACM	LB862ACM	LB1103ACM	LB1345ACM
r art ivo.	LDZJZ//CM	LD02 IACM	LDOOZACIW	EDTTOSACIA	LDTJ4JACM


IMPORTANT! Read all instructions before installing and operating emergency bar. This manual must be delivered to the end user. This manual assumes installation by a suitably qualified automotive technician.

## **SPECIFICATIONS:**

Function	Emergency Bar
LED Colour	Amber
Voltage Range	10-30VDC
Max Power	30W/48W/64W/80W/96W
LED#	30/96/128/160/192
Flash Pattern#	Quad Flash Pattern (LB252ACM) 10 Flash Patterns (LB621/862/1103/1345ACM)
Approval	ECE R10, SAE/J845 Class 1
IP Rating	IP67
Lens	Polycarbonate
Mounting	Single Bolt/Bracket (LB252ACM only) 4 Point Fixed Base

No	No Flash Pattern		No	Flash Pattern
1	Rotate		6	Fast/Slow Split
2	Single (Class 1, LB621/862/1103/1345)		7	Sequential Combine
3	Quad (LB252ACM Class1 Only)		8	Left/Right Split/Single
4	Quint Split		9	Random 1
5	Single/Triple/Quint		10	Random 2

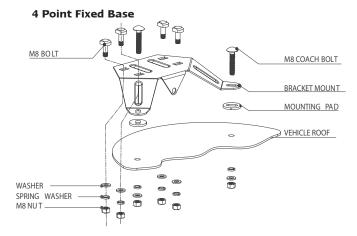

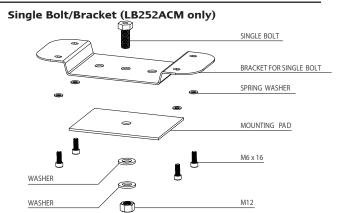

## **PRE-INSTALLATION:**

1) Carefully unpack and inspect the emergency bar and all mounting accessories before attempting installation. If any parts are found to be damaged or missing please contact your LED Autolamps distributor for advice.

2) Plan all cable routing before proceeding with installation. When drilling vehicle surface ensure the area is free from any wires, fuel lines, upholstery, air bags etc. that could be damaged.


## **MOUNTING LOCATION:**

Ensure the chosen mounting location is a smooth flat area of the vehicle roof. Position the emergency bar centrally to the vehicle's width. When mounting the product ensure it is level from front-to-back and left-to-right. Ensure there are no obstructions limiting visibility to traffic

**IMPORTANT!** This unit is a safety device and it must be connected to its own separate, fused power point to assure its continued operation should any other electrical accessory fail. Do not wire in parallel with any other accessory. Disconnect the battery before wiring up the minibar, to prevent accidental shorting, arcing and/or electrical shock.

WIRING INSTRUCTIONS: Route wires from the vehicle positive feed to the switch panel in the cab. Use suitable hightemperature vehicle wire if it passes through the engine compartment. Install a suitable in-line fuse as close to the power feed as possible. Ensure emergency bar Black wire is connected to ground source on vehicle. Use cable ties and grommets to secure and protect all cables and wires.

### / If in doubt, please consult a qualified automotive electrician.

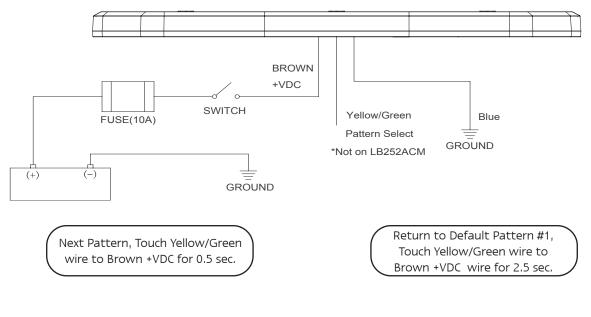

## **Conditions with Warranty Against Defects**



This warranty covers faults in components and workmanship of the lamp itself when used under normal conditions and does not cover the following:

- Faulty installation • Freight charges
- Over-voltage
- Excessive heat damage
- Accidental damage
- Misuse or abuse
- Chemicals that damage plastics as per Chemical Resistance List

• Cost of labour for removal and or replacement (see our website for more information).

Making a Claim: All warranty returns must be tested off the vehicle to ensure that the unit is at fault. This can be done by directly attaching the lamps to a fully charged 12-volt battery. Do not replace any products unless you are 100% sure that the suspected faulty product will be covered under warranty. If the unit is faulty, call your place of purchase so it can be directed to the LED Technologies warranty department or contact the LED Autolamps warranty department direct for full testing, evaluation, and warranty repairs.

If you consider the lamp to be faulty, disconnect the wiring of the lamp, remove nuts from bolts and send to: LED Autolamps Reply Paid 90350, PO Box 2107 Bundoora VIC 3083, allow five business days for evaluation. Please ensure returned warranties/credits have a completed Warranty Claim Form, which is found on our website under the "Warranty" Tab.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more information, contact

#### **LED Autolamps**

Phone 03 9466 7075, Email led@ledtech.com.au or visit our website www.ledautolamps.com. Head Office 42 Enterprise Drive Bundoora Vic 3083