## High Powered Magenta Hazard/Warning Lamp

11 Flash Patterns

IP67
Protection

3 Year Warranty

• 11 Flash Patterns

• Super Low Profile

• 3M Tape/Screw Fitting

• Synchronising Wire

• High Powered 3 Watt LEDs

IP67 Rated

**Function** Magenta Hazard/Warning Lamp


Size 89mm x 30mm x 8mm

**Voltage** Multivolt 12-24V

**LED Qty** 3 x 3 Watt

Cable 25cm

Draw	Constant	Strobe
@13.8V	0.40A	0.20A
@28V	0.18A	0.10A

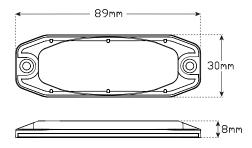



## **Flash Selection**

- 1. Connect Red wire to power and Black wire to earth to power the lamp.
- 2. Tap Brown wire to power to cycle through the 11 flash patterns.
- 3. Hold Brown wire to power for 7 seconds to reset to the start (Constant Flash Pattern #1).

## Simultaneous or Alternating Flash (when using multiple units)

- To enter grouping mode, connect all Red and Brown wires together, then connect to power. Each lamp will flash to identify which group they belong to.
- Single Flash = Group 1, Double Flash = Group 2.
- 2. While maintaining power to Red wires, remove the Brown wires from power.
- 3. To change groups, tap Brown wire to power.

  Lamps that are set to the same group will flash simultaneously.

  Lamps that are in opposite groups will alternate flash.
- 4. Once lamps are in desired group, disconnect Red wires from power then reconnect to power to exit grouping mode.
- 5. Connect all brown wires together to synchronise lamps. (Hold all brown wires to power for 7 seconds to reset all flash patterns to start)

NOTE: Maximum of 20 lamps can be Syncronized together.

Flash Pattern Selection*				
1	Constant On	7	Single all	
2	Single (2Hz)	8	Double all	
3	Double (2Hz)	9	Quad all	
4	Triple (2Hz)	10	Quint all	
5	Quad (2Hz)	11	Ultra all	
6	Random			

