High Power Magenta Hazard/Warning Lamp

14 Flash Patterns

IP67
Protection

3 Year Warranty

• 14 Flash Patterns

• Super Low Profile

• 3M Tape/Screw Fitting

• Synchronising Wire

High Powered 3 Watt LEDs

• IP67 Rated

• 3 Year Warranty

Function Magenta Hazard/Warning Lamp


Size 131mm x 30mm x 8mm

Voltage Multivolt 12-24V

LED Qty 6 x 3 Watt

Cable 25cm

Draw	Constant	Strobe
@13.8V	0.29A	0.72-0.005A
@28V	0.153A	0.36-0.008A

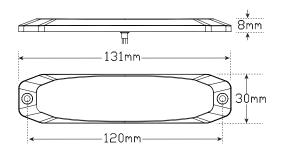



Flash Selection

- 1. Connect Red wire to power and Black wire to earth to power the lamp.
- 2. Tap Brown wire to power to cycle through the 11 flash patterns.
- 3. Hold Brown wire to power for 7 seconds to reset to the start (Constant Flash Pattern #1).

Simultaneous or Alternating Flash (when using multiple units)

- To enter grouping mode, connect all Red and Brown wires together, then connect to power. Each lamp will flash to identify which group they belong to.
- Single Flash = Group 1, Double Flash = Group 2.
- 2. While maintaining power to Red wires, remove the Brown wires from power.
- 3. To change groups, tap Brown wire to power.

 Lamps that are set to the same group will flash simultaneously.

 Lamps that are in opposite groups will alternate flash.
- 4. Once lamps are in desired group, disconnect Red wires from power then reconnect to power to exit grouping mode.
- 5. Connect all brown wires together to synchronise lamps. (Hold all brown wires to power for 7 seconds to reset all flash patterns to start)

NOTE: Maximum of 20 lamps can be Syncronized together.

Flash Pattern Selection*			
1	Constant On	8	Single all
2	Single (2Hz)	9	Double all
3	Double (2Hz)	10	Quad all
4	Quad (2Hz)	11	Quint all
5	Random	12	Ultra all
6	Double (Split)	13	Single-Quad all
7	Quad (Split)	14	Constant/Double

